

THE MOUNT VERNON MANTEL COMPANY™

Installation of Corner Bookcase Cabinets

- 5.) Remove all parts from packaging.

Inventory should include:

A (1) Bag of screws

B. (1) A B Panel (1) B C Panel (1) C D Panel (1) Single A Panel (1) Single D Panel

* SEE FIGURE B*

C. (1) Top of bookcase

D. (1) Shelf with clips (if applicable).

- 6.) **NOTE:** All letters should line up after assembly is complete (see figure A).

Attach A B panel to "Single A Panel" using screws provided.

Do the same with C D panel and "Single D Panel."

- 7.) Attach A B Panel to B C Panel.

- 8.) Attach B C Panel to C D Panel as well.

- 9.) Place top panel on bookcase framework (Figure B).

With sides and back lining up with top panel, screw top panel in place using the holes provided. Bookcase is now complete and ready to be installed.

- 10.) With 2 people set bookcase in desired place, as far back into the wall as possible.


NOTE: Due to framing variations in home bookcase may not fit exactly flush on sides as is intended.

- 11.) Installation is now complete. *For desired security bookcase may be screwed to wall studs.


- 12.) If shelf option was exercised, with bookcase in place, determine desired height of shelf within bookcase and make marks $\frac{3}{4}$ " below height. Drill holes. (see xs on Figure B).

- 13.) 6 Shelf clips are provided and are to be used two per panel (excluding "Single A." and Single D" panels) at $\frac{3}{4}$ " below desired height. (see x's on Figure B).

10. Place shelf on clips. Installation complete.

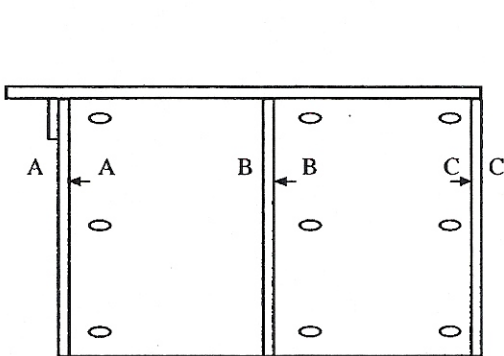

Side & Back View (FIGURE A)

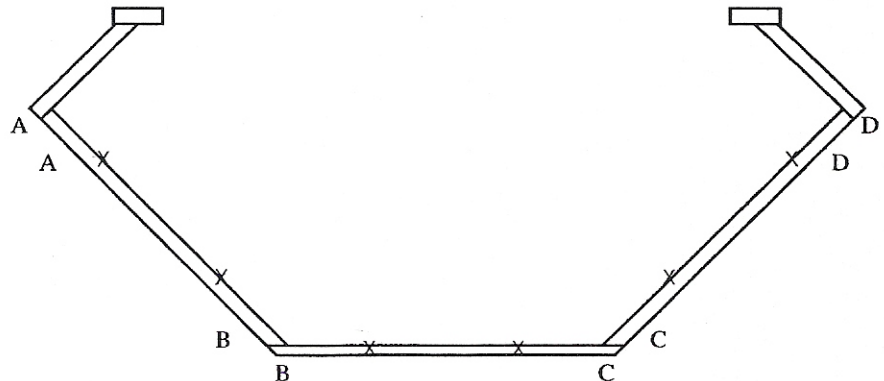

Overhead View (Without bookcase top)
(FIGURE B) Shelf clips (optional)