

THE MOUNT VERNON MANTEL COMPANY™

Installation of Direct Vent and Ventless Cabinets

- 1.) Remove all parts from packaging.
Inventory should include:
A (1) Bag of screws
B. (1) A Panel, (1) B Panel, (1) C Panel (see Figure A), (1) 2" kleet (straight cabinets only to be mounted last at spots D & E)
C. (1) Top panel
D. Depending on application, there may be one or more of the following: See **NOTES** below, for application
 - 1) Hearth (if straight cabinet)
 - 2) Brass or Black Trim Kit
 - 3) Plinth Filler
 - 4) ¾" or 1" riser *if ordered as Universal Cabinet or per request
 - 5) Backer boards and inside jambs (if ordered as oversized cabinet)
- 2.) **NOTE:** All letters and recessed grooves should line up after assembly is complete (see figure A).
- 3.) With cabinet parts face down, slide "A" panel into "B" panel and attaché with screws provided. Slide "C" panel into "B" panel with screws provided.
- 4.) On straight cabinets only, mount 2" kleet at D and E (see figure B).
**** Assembly of basic cabinets complete****

NOTES:

- 1) Hearth to go in desired place under fireplace unit and cabinet
- 2) Brass or black trim kit (follow instructions provided in kit). *If plinth filler or ¾"/1" is added, plinth filler or ¾"/1" riser must be installed before brass or black trim.
- 3) Plinth filler is to be placed in between plinth blocks at bottom of cabinet.
- 4) 1" and ¾" riser are to be placed underneath fireplace unit.
- 5). A. For backer boards assemble 3 4 board to single 3 & single 4 (figure B). Place ¾" to inside of 1 mark and attach. Do same with 2 mark. Place backer board in place and screw.
B. Inside jambs to go in place after marble/tile.

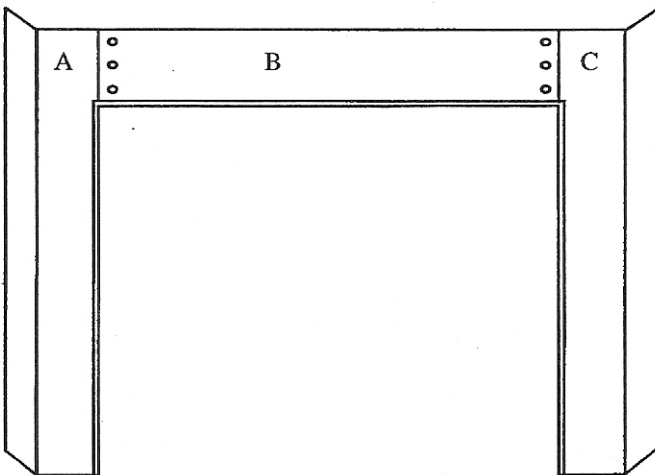


FIGURE A
Back view of cabinet
*Shaded area reflects
1 ¼ x 3/8 recessed groove

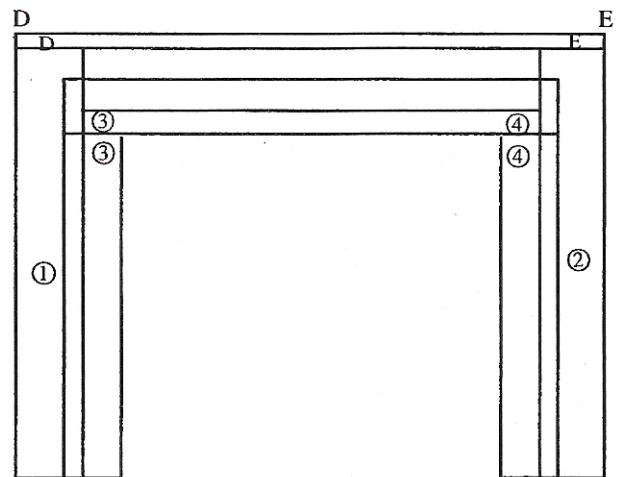


FIGURE B
Back view with mounting kleet (for
straight cabinet only) and backer
boards (for oversized cabinets only)