


# THE MOUNT VERNON MANTEL COMPANY™

## Installation of Full Surround Mantels\*

### READ ALL INSTRUCTIONS BEFORE CONTINUING

1. Place top of mantel upside down on the floor.
2. Place right/left legs into aligning slots. Fasten with screws provided.
3. With two people, stand mantel up and set into place.
4. With a pencil, mark across the top and down both legs of the mantel, leaving a faint line. Remove the mantel and set it aside.
5. Measure down 4" from the line you drew and draw another line (Figure 1).
6. Mount the wedged cleat (sharp side up and away from wall) at this point using two ½" or 3" screws.
7. Place the mantel back into position by lifting mantel above wedged cleat and allowing cleat to pull mantel snug to the wall as you lower it.
8. Place the scribe mould around the inside of the mantel and nail into place.

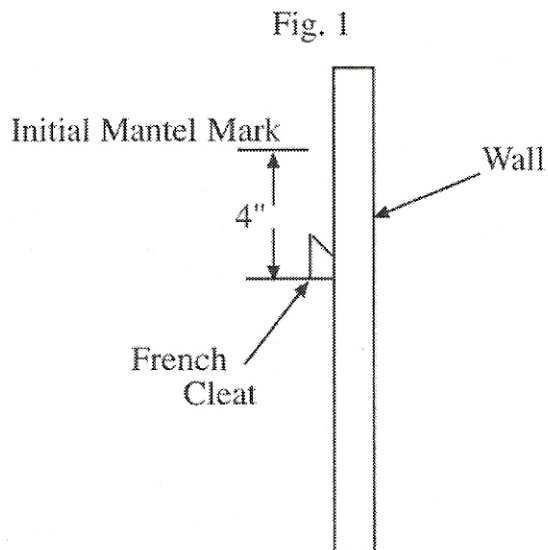

\* using French/Angled cleat ¾" x 1 5/8" x 4"