

THE MOUNT VERNON MANTEL COMPANY™

Installation of Straight Book Cabinets

- 1.) Remove all parts from packaging.
Inventory should include:
 - A. (1) Bag of screws
 - B. (1) Single A Panel (1) Single B Panel (1) A B Panel (see Figure B)
 - C. (1) Top of Bookcase
 - D. (1) Shelf with clips (if applicable).
- 2.) **NOTE:** All letters should line up after assembly is complete. (see Figure B)
Attach Single A Panel to A B Panel using screws provided.
Do the same with Single B Panel.
- 3.) Place top panel on bookcase framework (see figure B) with sides & back lining up top panel, screw top panel in place using the holes provided.
****BOOKCASE IS NOW COMPLETE & READY TO BE INSTALLED****
- 4.) With 2 people set bookcase in desired place.
- 5.) **INSTALLATION IS NOW COMPLETE.** For desired security bookcase may be screwed to wall studs.
- 6.) If shelf option was exercised, with bookcase in place, determine desired height of shelf within bookcase & make marks $\frac{3}{4}$ " below height. Drill holes (see x's on Figure B).
- 7.) 6 Shelf clips are provided & are to be used 2 per panel at $\frac{3}{4}$ " below desired height. (see Figure B).
- 8.) Place shelf on clips. * **INSTALLATION COMPLETE.**

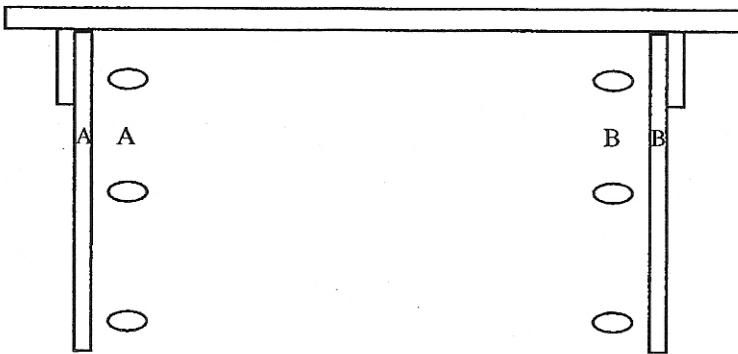


FIGURE A
Back view

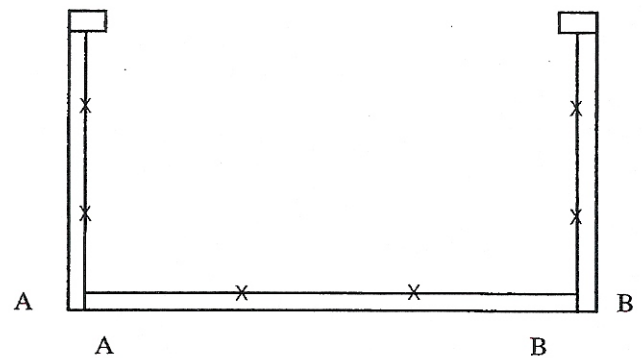


FIGURE B
OVERHEAD VIEW
(without bookcase top)
*Shelf clips (optional)